

Disconnecting W6PW from a WiresX distant node:

Please feel free to connect our repeater to a distant WiresX room but remember **it is your responsibility to disconnect it** afterwards. Here are the instructions of how to do it based on your

radio:

Room Disconnect for the various Yaesu C4FM Radios

The FT-991 has an easy method to disconnect from a room or node with in the WIRES X digital mode; touch the [DISCNET] button. The FT1D, FT1XD, FT2D and FTM-400DR have a different mode for disconnecting from a room or node, while in WIRES X mode. The following is a brief description on disconnecting by radio model.

FT1D and FT1XD Disconnect



Figure 90 FT1D and FT1XD Disconnect method

FT2D Disconnect



Figure 91 FT2D Disconnect methods

FTM-100D FTM-400DR Disconnect



Figure 92 FTM-400DR Disconnect method